



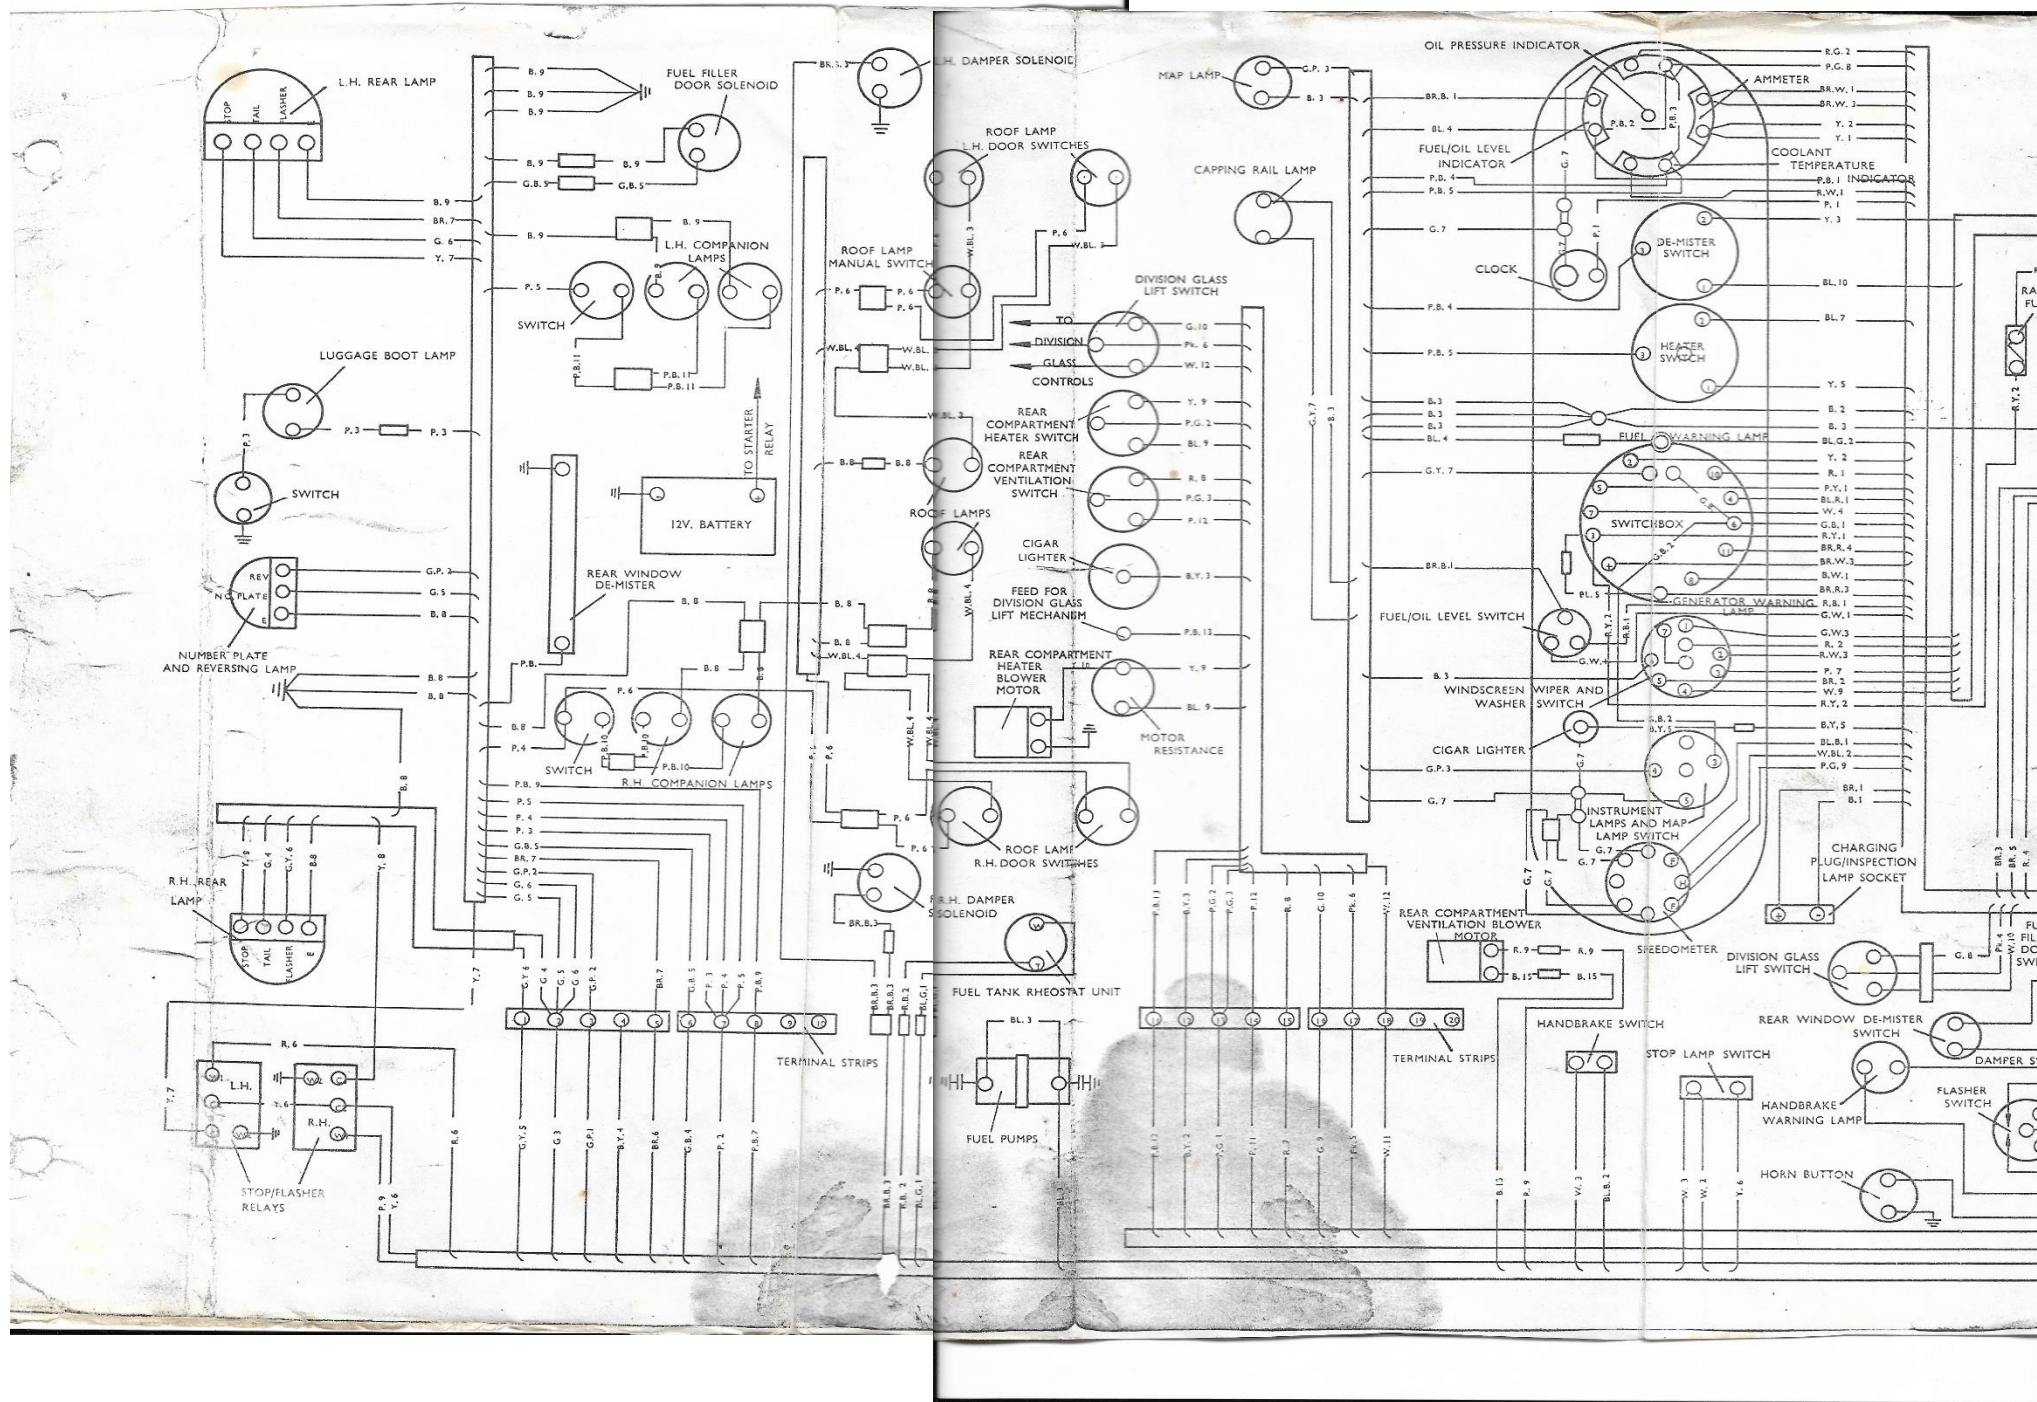

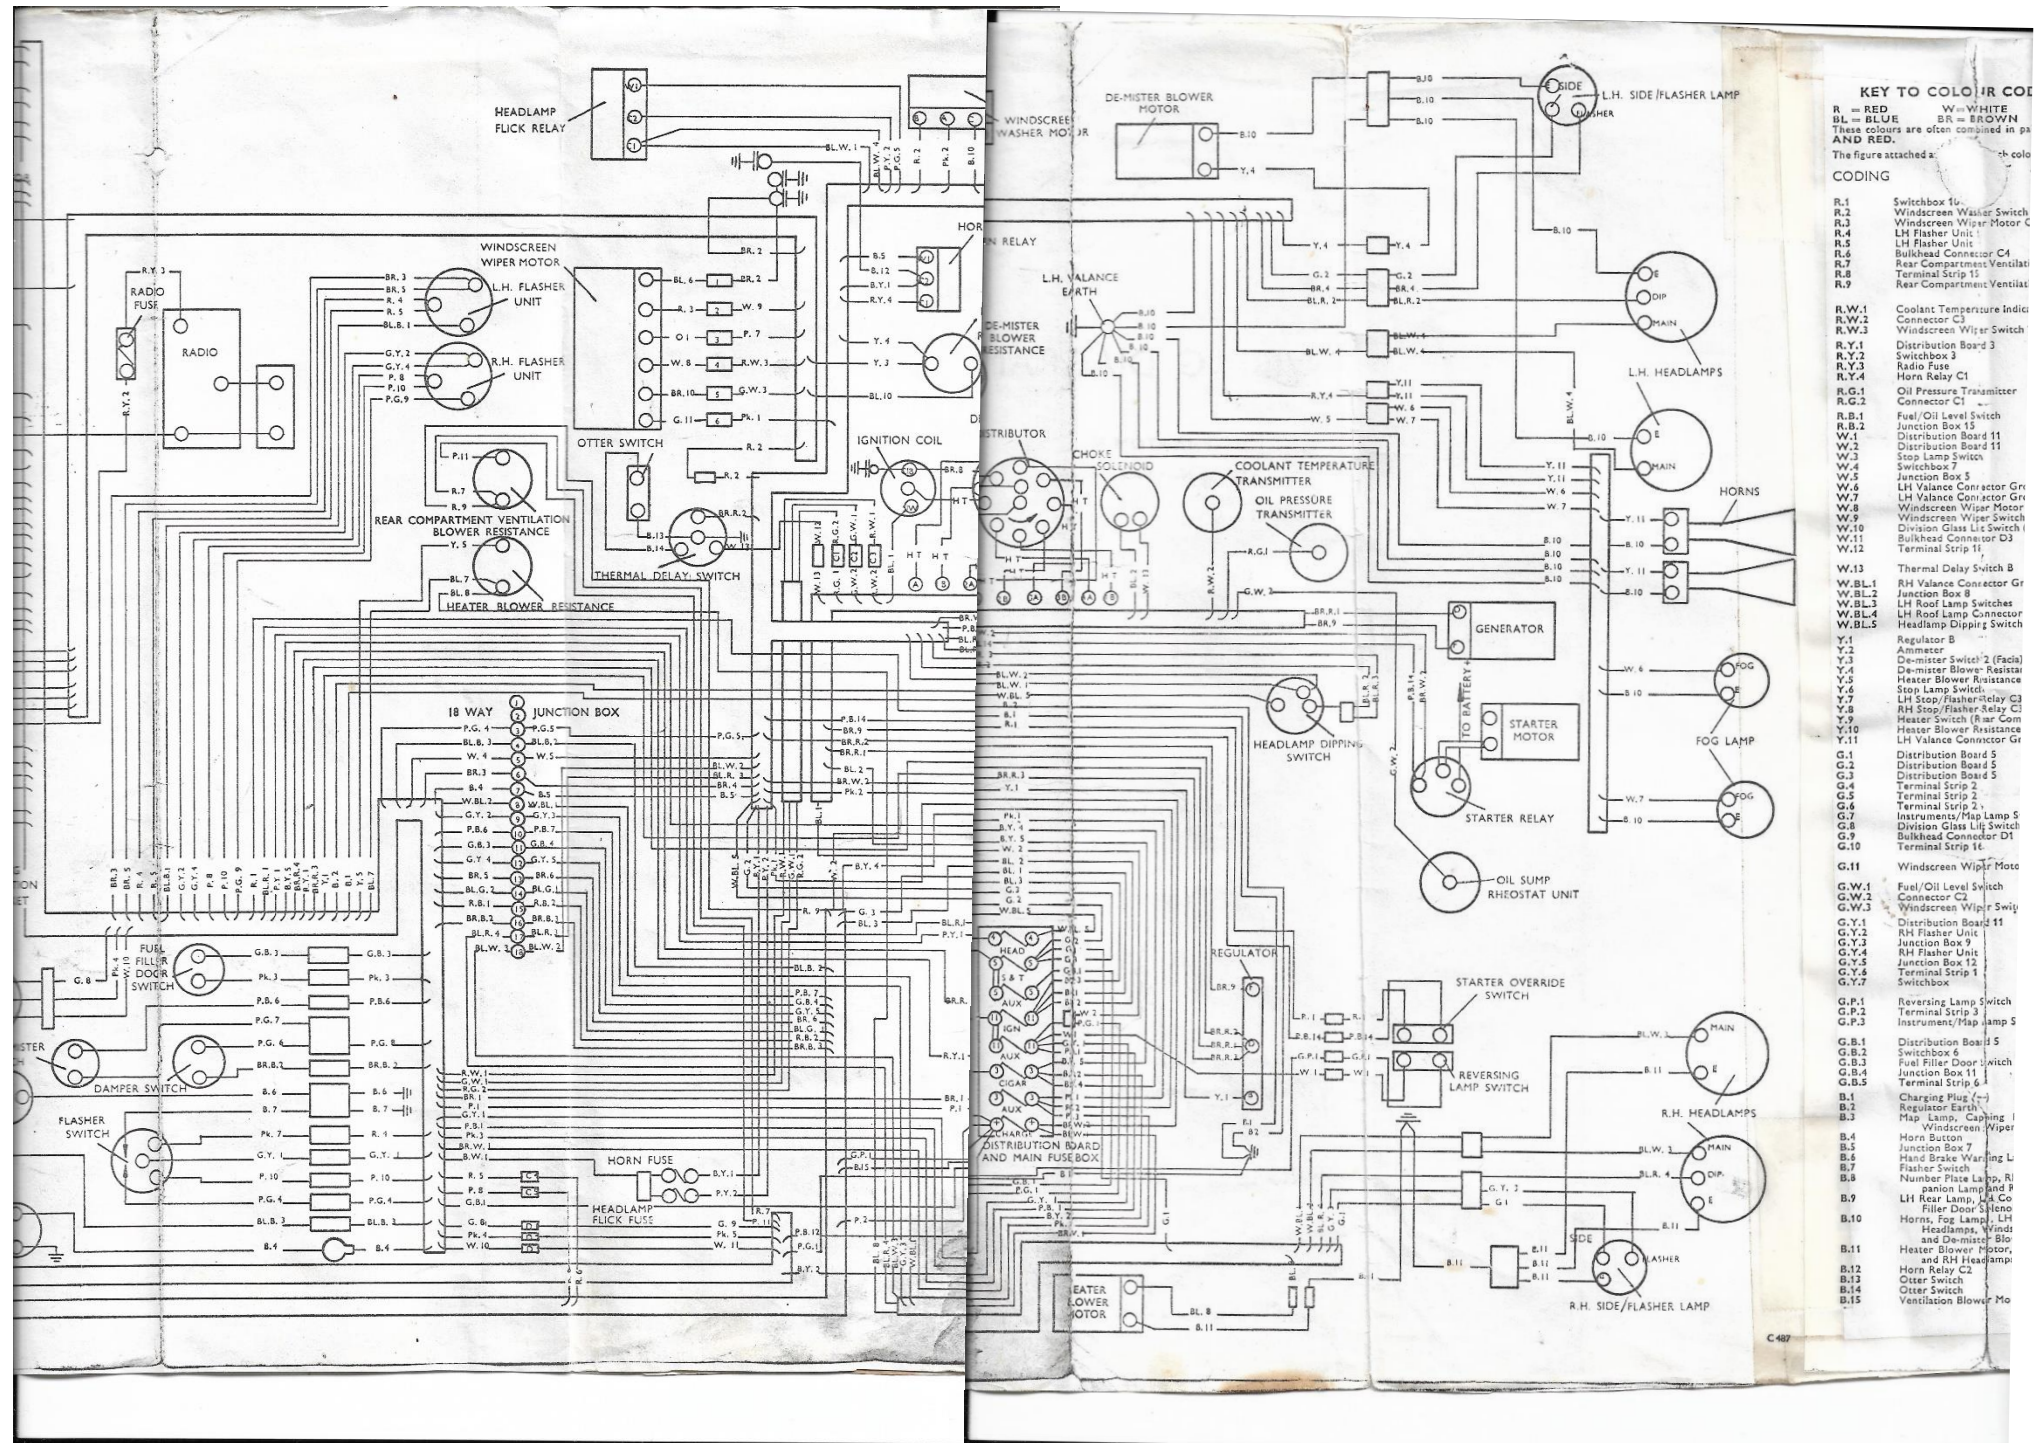

COLOUR CODING AND CONVENTIONAL SYMBOLS

W—WHITE Y—YELLOW G—GREEN B—BLACK
BR—BROWN P—PURPLE PK—PINK O—ORANGE
When combined in pairs, e.g. P.Y.—PURPLE AND YELLOW BR.R.—BROWN

Colour coding identifies the wire and enables its destination to be traced.

 
WIRING CONNECTIONS

to Starter Override Switch
to Windscreen Washer Motor B
to Windscreen Wiper Motor
to Steering Column Connector Group
to Bulkhead Connector C4
to LH Stop/Flasher Relay W1
to Terminal Strip 15
to Rear Compartment Ventilation Switch
to Rear Compartment Ventilation Blower Motor
to Connector C3
to Coolant Temperature Transmitter
to Windscreen Wiper Motor Connector 4
to Switchbox 3
to Radio Fuse
to LH Valve Connector Group
to Connector C1
to Oil Pressure Indicator
to Junction Box 15
to Fuel Tank Rheostat Unit T
to Reversing Lamp Switch
to Stop Lamp Switch
to Hand Brake Switch
to Junction Box 5
to LH Valve Connector Group
to LH Fog Lamp
to RH Fog Lamp
to Windscreen Wiper Motor
to Windscreen Wiper Motor Connector 2
to Bulkhead Connector D3
to Terminal Strip 18
to Division Glass Lift Switch (Rear Compartment)
to Choke Solenoid
to Junction Box 8
to Headlamp Warning Lamp (Speedometer)
to LH Roof Lamp
to RH Roof Lamp and Switches
to Distribution Board 4
to Ammeter
to Switchbox 2
to Demister Blower Resistance
to Heater Switch 1 (Facia)
to Stop/Flasher Relay C2
to LH Rear Lamp (Stop)
to Heater Blower Resistance
to Heater Blower Motor
to Horns
to RH Side Lamp
to LH Side Lamp
to Terminal Strip 2
to RH Rear Lamp (Tail)
to Number Plate Lamp
to LH Rear Lamp (Tail)
to Instrument Lamps
to Bulkhead Connector D1
to Terminal Strip 16
to Division Glass Lift Switch (Rear Compartment)
to Windscreen Wiper Motor
to Connector C2
to Oil Pump Rheostat Unit
to Windscreen Wiper Motor Connector 5
to Flasher Switch
to Junction Box 9
to RH Side Flasher Lamp
to Junction Box 12
to Terminal Strip 1
to RH Rear Lamp (Flasher)
to Capping Rail Lamp
to Terminal Strip 3
to Reversing Lamp
to Map Lamp
to Switchbox 6
to Instruments Lamps Switch 3
to Junction Box 11
to Terminal Strip 6
to Fuel Filler Door Solenoid
to Regulator Earth
to Instrument Panel Earth
to Instrument Panel Earth
to Horn Relay W1
to Steering Column Earth Point
to Instrument Side Plate Earth
to Body RH Earth
to Body LH Earth
to LH Valve Earth
to RH Valve Earth
to Condenser
to Earth on Thermal Delay Switch
to Thermal Delay Switch
to Regulator Earth

CODING

B.W.1 Switchbox 8
B.Y.1 Horn Fuse
B.Y.2 Distribution Board 3
B.Y.3 Terminal Strip 12
B.Y.4 Distribution Board 3
B.Y.5 Distribution Board 3
BL.1 Distribution Board 11
BL.2 Distribution Board 11
BL.3 Distribution Board 11
BL.4 Fuel/Oil Level Indicator
BL.5 Switchbox 3
BL.6 Windscreen Wiper Motor Connector 1
BL.7 Heater Switch 2 (Facia)
BL.8 Heater Blower Motor Resistance
BL.9 Heater Switch (Rear Compartment)
BL.10 Demister Switch
BL.R.1 Distribution Board 4
BL.R.2 Headlamp Dipping Switch
BL.R.3 Headlamp Dipping Switch
BL.R.4 Junction Box 17
BL.W.1 Headlamp Dipping Switch
BL.W.2 Headlamp Dipping Switch
BL.W.3 Headlamp Dipping Switch
BL.W.4 Headlamp Flick Relay C1
BL.G.1 Fuel Tank Rheostat Unit VV
BL.G.2 Junction Box 14
BL.B.1 LH Flasher Unit
BL.B.2 Hand Brake Switch
BL.B.3 Junction Box 4
BR.1 Distribution Board (—)
BR.2 Windscreen Wiper Switch 5
BR.3 LH Flasher Unit
BR.4 Junction Box 6
BR.5 LH Flasher Unit
BR.6 Junction Box 13
BR.7 Terminal Strip 5
BR.8 Ignition Coil (C.B.)
BR.9 Generator F
BR.10 Windscreen Wiper Motor Connector 5
BR.R.1 Generator D
BR.R.2 Regulator D
BR.R.3 Regulator D
BR.R.4 Switchbox 11
BR.W.1 Distribution Board (+)
BR.W.2 Distribution Board (+)
BR.W.3 Ammeter
BR.B.1 Fuel/Oil Level Switch
BR.B.2 Damper Switch
BR.B.3 Junction Box 16
P.1 Distribution Board (+)
P.2 Distribution Board (+)
P.3 Terminal Strip 7
P.4 Terminal Strip 7
P.5 Terminal Strip 7
P.6 RH Companion Switch
P.7 Windscreen Wiper Switch 3
P.8 RH Flasher Unit
P.9 Bulkhead Connector C5
P.10 RH Flasher Unit
P.11 Ventilation Blower Motor Resistance (Rear Compartment)
P.12 Terminal Strip 14
P.Y.1 Distribution Board 5
P.Y.2 Headlamp Flick Fuse
P.G.1 Distribution Board 11
P.G.2 Terminal Strip 13
P.G.3 Terminal Strip 13
P.G.4 Flasher Switch
P.G.5 Junction Box 3
P.G.6 Damper Switch
P.G.7 Rear Window De-mister Switch
P.G.8 Steering Column Connector Group
P.G.9 RH Flasher Unit
P.B.1 Distribution Board 11
P.B.2 Fuel/Oil Level Indicator
P.B.3 Oil Pressure Indicator
P.B.4 Coolant Temperature Indicator
P.B.5 Coolant Temperature Indicator
P.B.6 Rear Window De-mister Switch
P.B.7 Junction Box 10
P.B.9 Terminal Strip 8
P.B.10 RH Companion Lamp Switch
P.B.11 LH Companion Lamp Switch
P.B.12 Distribution Board (+)
P.B.13 Terminal Strip 11
P.B.14 Starter Override Switch
Pk.1 Distribution Board 3
Pk.2 Distribution Board 3
Pk.3 Distribution Board 3
Pk.4 Division Glass Lift Switch (Facia)
Pk.5 Bulkhead Connector D2
Pk.6 Terminal Strip 17
Pk.7 Flasher Switch
O.1 Windscreen Wiper Motor Connector 3

In addition to the colour coding, the following symbols are employed throughout the diagram.



WIRING CONNECTIONS

to Horn Fuse Connector
to Horn Relay C2
to Terminal Strip 12
to Cigar Lighter (Rear Compartment)
to Terminal Strip 4
to Cigar Lighter (Facia)
to Ignition Coil (S.V.)
to Choke Solenoid
to Fuel Pumps
to Fuel Warning Lamp
to Generator Warning Lamp
to Windscreen Wiper Motor
to Heater Blower Motor Resistance
to Heater Blower Motor
to Heater Blower Motor Resistance
to Demister Blower Motor Resistance
to Switchbox 4
to LH Headlamp (Dip)
to Junction Box 17
to RH Headlamp (Dip)
to Headlamp Flick Relay C1
to Junction Box 18
to RH Headlamps (Main)
to LH Headlamps (Main)
to Junction Box 14
to Fuel Warning Lamp
to LH Flasher Warning Lamp (Speedometer)
to Junction Box 4
to Hand Brake Warning Lamp
to Charging Plug (+)
to Windscreen Wiper Motor Connector 1
to Junction Box 6
to LH Side/Flasher Lamp
to LH Flasher Unit
to Terminal Strip 5
to LH Rear Lamp (Flasher)
to Distributor Contact Breaker
to Regulator F
to Windscreen Wiper Motor
to Regulator D
to Thermal Delay Switch
to Generator Warning Lamp
to Distribution Board 11
to Ammeter
to Starter Relay
to Switchbox (+)
to Fuel/Oil Level Indicator
to Junction Box 16
to Damper Solenoids
to Clock
to Terminal Strip 7
to Luggage Boot Lamp
to RH Companion Switch
to LH Companion Switch
to Roof Lamp Switches
to Windscreen Wiper Motor Connector 3
to Bulkhead Connector C5
to RH Stop/Flasher Relay W1
to Flasher Switch
to Terminal Strip 14
to Ventilation Switch (Rear Compartment)
to Switchbox 5
to Headlamp Flick Relay C2
to Terminal Strip 12
to Heater Switch (Rear Compartment)
to Ventilation Switch (Rear Compartment)
to Junction Box 3
to Headlamp Flick Relay W1
to Steering Column Connector Group
to Steering Column Connector Group
to Oil Pressure Indicator
to RH Flasher Warning Lamp (Speedometer)
to Fuel/Oil Level Indicator
to Oil Pressure Indicator
to Coolant Temperature Indicator
to Demister Switch 3
to Heater Switch 3 (Facia)
to Junction Box 10
to Terminal Strip 8
to Rear Window De-mister
to RH Companion Lamps
to LH Companion Lamps
to Terminal Strip 11
to Fuel for Division Glass Lift Mechanism
to Starter Relay
to Windscreen Wiper Motor Connector 6
to Windscreen Washer Motor A
to Fuel Filler Door Switch
to Bulkhead Connector D2
to Terminal Strip 17
to Division Glass Lift Switch (Rear Compartment)
to Steering Column Connector Group
to Windscreen Wiper Motor